



Fujifilm FinePix XP80 Shutter Button Replacement

The shutter button is the main communication point between you and your camera's main function: taking photos. When it's malfunctioning, you'll need a way to fix it. This guide will help you do just that.

Written By: Daniela Pesci





TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Open the side panel, housing the battery compartment, by pressing the center button down and twisting the dial.

Step 2



- Release the battery from its secured position by pulling the orange tab back. The battery can then be removed from its compartment.

Step 3 — Exterior Case



- Locate and remove the screws (2mm, 5 each) on the bottom of the camera, using PH000 Phillip hex head bit.

Step 4




- Located and remove the screws (2mm, 2 each) from the top of the camera, using H1.3 hex head bit.

Step 5



- Locate and remove the screws (2mm, 2 each) on the side of the camera, using H1.3 hex head bit.

Step 6

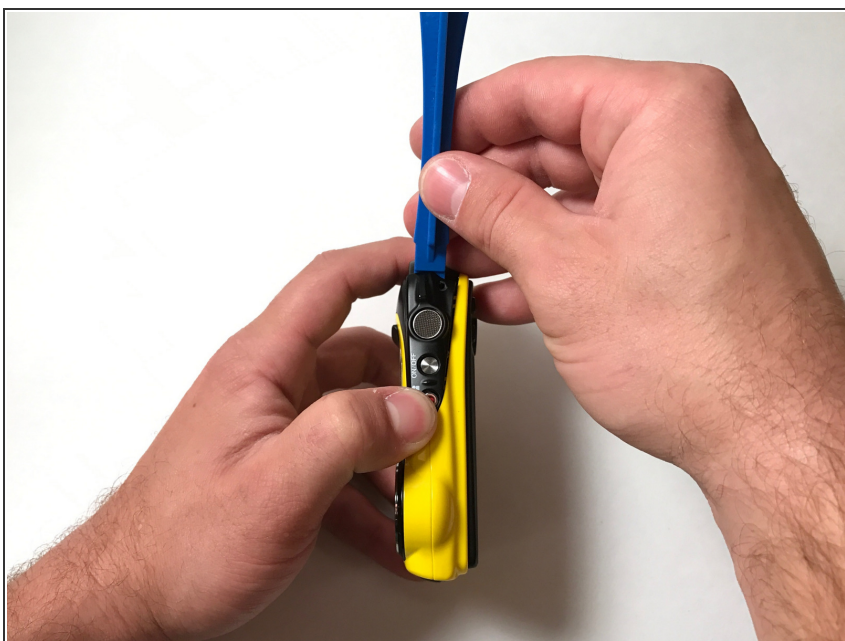

- Using a plastic opening tool, gently start to pry the button case, located at the top of the camera, so it unclips.

Step 7




- Continue to the side of the camera to gently pry the side area of the case apart.

Step 8




- Continue to the bottom of the camera and gently pry the case apart.

Step 9

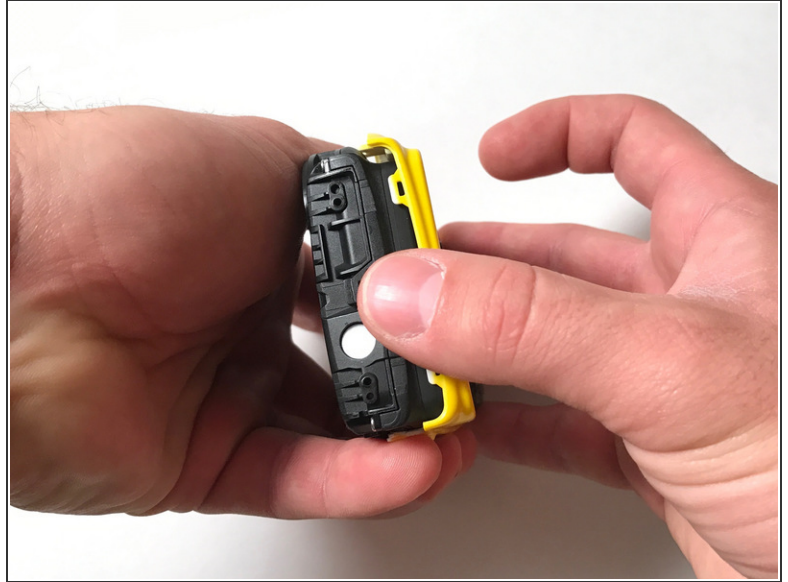

- It is now safe to remove the yellow front panel. While using your plastic opening tool, gently pry the front panel away from the camera.
- Once the front is removed, the yellow back panel can be taken off with just your hands.

Step 10 — Shutter Button

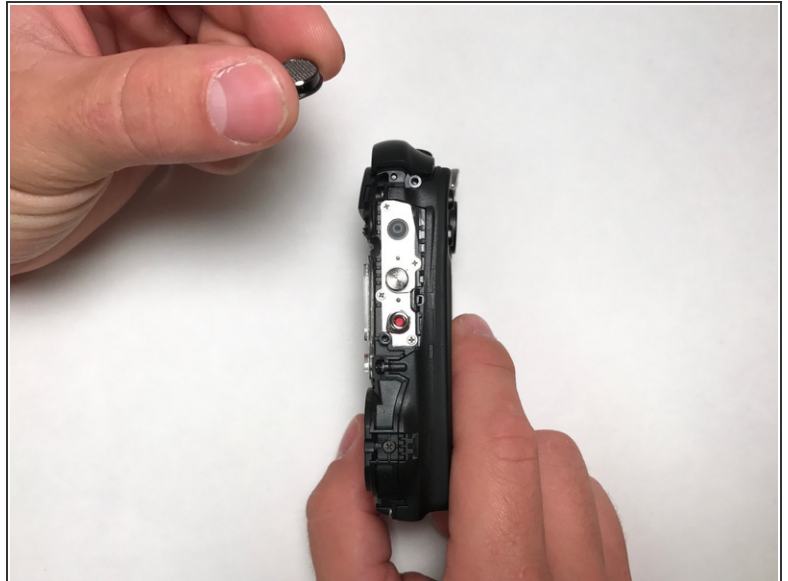

- Once the exterior case is removed, separate the plastic depressor to ensure there is nothing lodged in or around the button, preventing proper functionality.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 07:32:41 PM.